
 
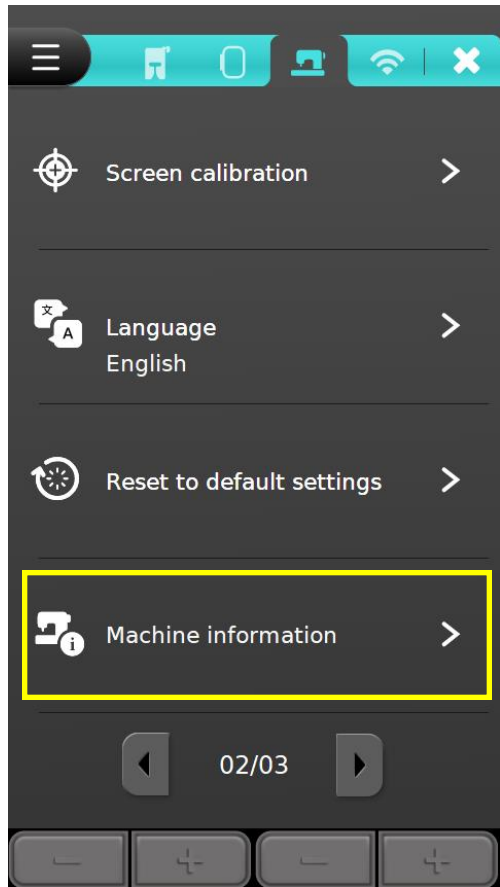



Click to enter
Settings



Click to enter
Machine
information

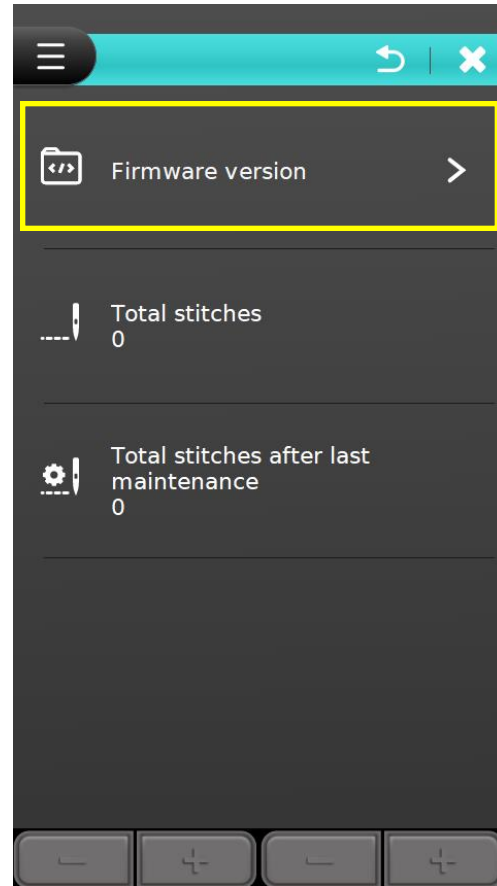


Click to enter
Firmware version

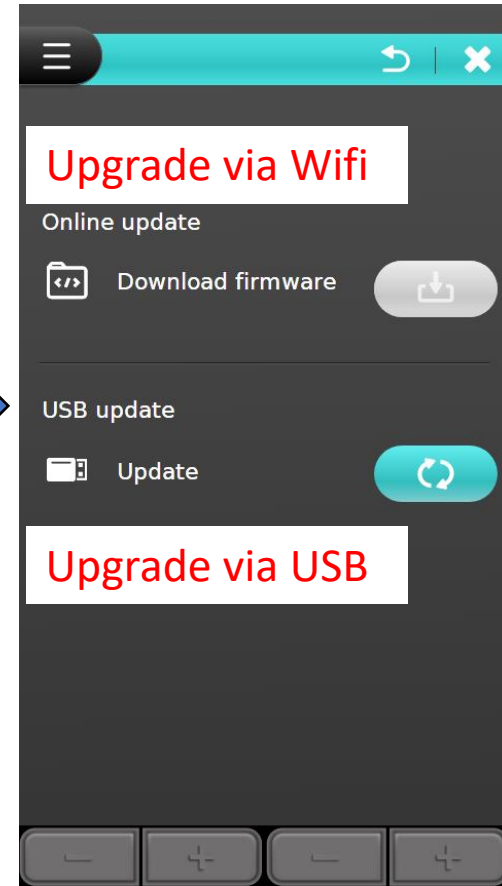

Select update method
(Wi-Fi or USB)

Screen during update

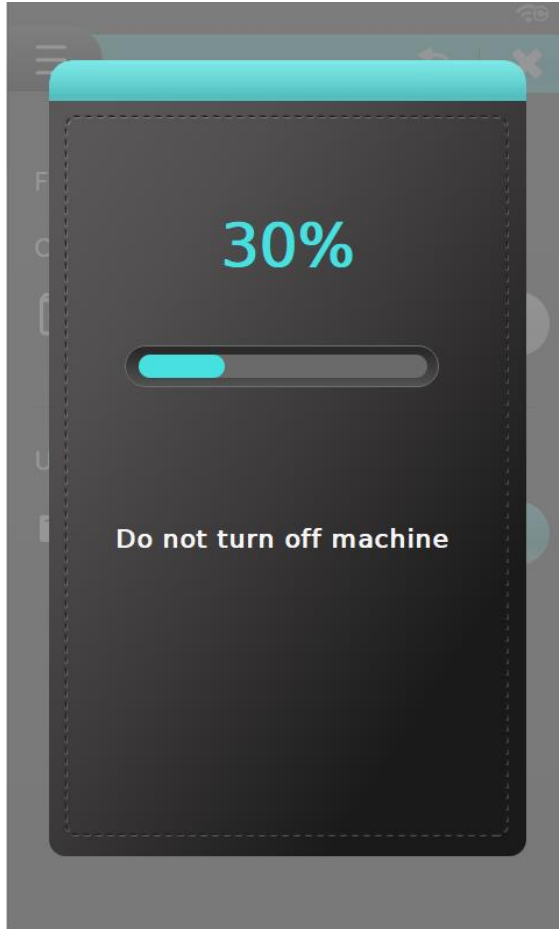

Screen after update

